

Receiving HV Connector # 8.2

Back side view Layout



Anode positive



Dynode positive



Anode neutral (shield)



Dynode neutral (shield)

Pins Position	Anode Positive	Anode Neutral	Dynode Positive	Dynode Neutral
A3M	1	2	3	4
A4M	5	6	7	8
A5M	9	10	11	21
A6M	20	19	18	17
A7M	16	15	14	13
A8M	12	22	23	24
A9M	25	26	27	28
A10M	29	30	40	39
B7M	38	37	36	35
B8M	34	33	32	31
B9M	41	42	43	44
B10M	45	46	47	48